



KONICA MINOLTA

AccurioPro WideDirector

**WORKFLOW  
AUTOMATION  
SOFTWARE FOR  
ACCURIO WIDE  
PRINTERS**  
**RETHINK INDUSTRIAL  
PRINTING**



Giving Shape to Ideas



The built-in image viewer provides a handy overview of all images. Clicking an image enlarges it.

# A ROBUST & STREAMLINED PRODUCTION WORKFLOW SOLUTION FOR AccurioWide PRINTERS.

**POWERFUL. SCALABLE. FULLY AUTOMATED.  
TAKE CONTROL OF THE ENTIRE PRINTING PROCESS.**

Managing all your print data and devices can be overwhelming. But today, when every job moves at the speed of light, having full control of your print operations – from scheduling jobs, ordering materials, tracking costs and so much more – is absolutely critical to your business. Konica Minolta's AccurioPro WideDirector software is the workflow automation

solution made specifically for your AccurioWide printers. It ensures you control the entire printing process from one production tool – from pre-press to production to finishing. You will see the benefits of better print quality, faster turnaround time, less waste and high customer satisfaction.

# ONE INTUITIVE SOFTWARE SOLUTION. ALL THE TOOLS YOU NEED.

AccurioPro WideDirector puts you squarely in control of your production process. Its powerful preflighting speeds up throughput, while reducing idle time and increasing productivity. The result is a fully automated workflow process that gives you unmatched quality control and faster turnaround time, while also reducing waste. This robust, intuitive software will drive your AccurioWide printers – and your business.

## Intuitive user interface and modular structure

The easy-to-use interface features improved job layout and structure with operator-accurate visualization so you can see what you will actually print. Ready access to all controls allows any last minute changes to be handled with ease. For more advanced needs, AccurioPro WideDirector offers additional modules so you can increase capabilities.



## Color management

Color management capabilities provide intelligent color quality for color consistency and reproduction. You'll get reliable, predictable results and color fidelity performance. It features calibrated print modes, spot color conversion based on PANTONE libraries and patented technology of regulated profiles to create smooth vignettes.



## Automated preflighting

AccurioPro WideDirector standardizes processes to avoid mistakes. Automatic checking of PDF files and job validation identifies potential issues early in the process, ensuring all print data is handled correctly. This improves quality control, saving time and resources.

## Adobe pdf print engine

Adobe PDF Print Engine (APPE) allows for creativity as it manages the generation of the PDF master files, while eliminating the need for manual intervention during the workflow process. Device-dependent processes are driven by instructions from APPE with PDF technology ensuring end-to-end consistency across all devices.

# LICENSED OPTIONS FOR A WIDER RANGE OF CAPABILITIES.

## One-way vision creation

License enabling tool to create simulated window performance graphics on inexpensive and easier to handle clear film.

## Production dashboard

A browser-based tool to view and generate reports on ink and media consumption. You'll get exceptionally accurate ink estimates that are generated while rendering jobs. It can also be used as an estimating tool or for cost tracking.

## Seamless print

Provides automatic or interactive layout for specially designed "seamless background" images that can repeat endlessly without gaps. Commonly used for wall coverings and flooring.

## Xml to jdf connector

Enables conversion of properly formatted XML into JDF, which then creates a job in AccurioPro WideDirector. A file exported from an order entry or MIS system will create the job, specifying file(s), printer, print mode, substrate, quantity and more. User can easily customize.



## Hardware Add-on for Even More Control

Automation and accuracy are critical to your business. Konica Minolta's FD-9 Scanning Spectrophotometer offers even more accurate color profiling and color management. It combines speed, precision, ease-of-use and versatility.



# TECHNICAL SPECIFICATIONS

## RETHINK INDUSTRIAL PRINTING

### Workflow automation software for AccurioWide printers

#### System Integration Rip / Workflow Software

AccurioPro WideDirector server	Single processor – (1) Intel Xeon 1.7 GHz 6 Core Processor Dual processor – (2) Intel Xeon 1.7 GHz 6 Core Processor
AccurioPro WideDirector software	Production suite – Includes 3 printer licenses
AccurioPro WideDirector starter	Dongle (license)

#### Additional Licenses

Additional printer license (1 each)	Optional
Seamless print support	Optional
XML to JDF connector	Optional
One-way vision creation	Optional
Production dashboard	Optional

#### Color Scanning Devices

Konica Minolta FD-9 Spectrophotometer	Optional
---------------------------------------	----------

#### Printer Driver Support

Third party options	Select HP Latex®, HP DesignJet®, Mimaki® and Epson® printers
---------------------	--

- The support and availability of the listed specifications and functionalities varies depending on operating systems, applications and network protocols as well as network and system configurations.
- The actual life of each consumable will vary depending on use and other printing variables including coverage, size, media type, ambient temperature and humidity.
- Specifications are based on the information available at the time of printing and are subject to change without notice.
- Konica Minolta does not warrant that any specifications mentioned will be error-free.
- All brand and product names may be registered trademarks or trademarks of their respective holders and are hereby acknowledged.








## QUICK FACTS – AccurioPro WideDirector

**AccurioPro WideDirector is the complete workflow solution for taking control of the entire production process.**

- Increases productivity and reduces costs
- Powerful preflighting to speed up throughput
- Functionality includes nesting, tiling, media handling, parameter presets, smart DQS, automated intake, see-through concept, proofing support and more
- Easy-to-use, intuitive interface
- Robust plug-ins and add-ons for even more capabilities

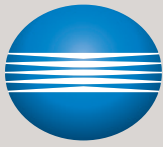

KONICA MINOLTA

**AccurioPro solutions for maximizing productivity and growing your business.**

AccurioPro is a comprehensive suite of modular tools and solutions that automate labor-intensive processes to streamline workflow and maximize productivity. As industry demands continue to change and grow, AccurioPro will drive efficiencies to reduce costs, increase accuracy and productivity, while strengthening your current investments.